

Fieldmove Clino

iPhone User Guide



Table of Contents

Introduction	2
Disclaimer	3
Definitions	4
Side Panel	5
Compass / Clino	7
Notes & Images	13
Map	16
Stereonet	22
Project	24
Switch Project	26
Settings	28
Export	29
Digital Compass Calibration	32
Frequently Asked Questions	35
Our Experience	39
System Requirements	42
About Midland Valley	43



Introduction

This is a guide to using FieldMove Clino (hereafter referred to as Clino) and its features.



Clino is a digital compass-clinometer for data capture on smartphones. The app allows an iPhone or Android phone (see the Android user guide) to be used as a traditional hand-held bearing compass and clinometer for measuring and capturing the orientation of planar and linear features in the field. The field notebook and camera are an integral part of this new technology allowing the capture and storage of geo-referenced photographs and text notes. Additional features (Pro features) can be purchased in-app. The Pro features allow the user to plot stereonet, draw lines and polygons onto maps and to change map symbols.

Clino supports online Google Maps as well as offline maps as geo-referenced MBTile basemaps. Projects can be exported to CSV (.csv comma-separated values), and Move™ (.mve). With the Pro features installed, a project can be exported to Google Earth (.kmz).

This document outlines functionality and recommends workflows to use within Clino.



Disclaimer

The use of GPS devices and smartphones as navigation aids

The internal GPS in a device can be used to automatically set location information in the app, which is recorded as latitude and longitude.

Global Positioning System (GPS) devices are commonly used to aid navigation, having grown in popularity over the past decade. Over the last few years, this has extended to smartphones and digital compasses, which are often equipped with GPS functionality.

GPS is a valuable aid to navigation during fieldwork, however it is important to keep safety at the forefront, and we draw your attention to the advice given by a number of mountaineering councils:

"Everyone heading into the hills needs to learn how to read a map, and be able to navigate effectively with a paper map and traditional magnetic compass, especially in poor visibility."

The Clino app requires online data transfers for some features (Maps, sharing exported files, etc.). Using such functionality over mobile network services (such as 3G) may incur costs from your provider. If you use the app and services on your mobile phone, you are responsible for any fees that your phone service provider charges for data services, etc. Your phone service provider is not the provider of the Clino app.

Midland Valley accepts no liability or loss, resulting from the use or misuse of this product.



Definitions

Project

A project is a set of localities, structural data, notes and images related to a specific mapping area. When exporting data it is the whole project that is exported.

Localities

Localities are a way of grouping data and are user definable. For example, localities can be applied to an outcrop or for a new day in the field.

Stratigraphy

User defined list that is used to assign a colour to structural measurements or line objects i.e. to define a rock type or a fault. This information is recorded as an attribute on the object.

Data Type

Defined as planar and linear data. Location can be set automatically using the device GPS.

Comments

These are linked to specific measurements, for example describing in detail the surface where a dip measurement has been taken from.

Notes

Notes are geo-referenced descriptions, such as a sample location or notable change in vegetation. This is akin to the notes taken in a field notebook while mapping. Photos may be added to notes.

Maps

Images can be shown over the online map on the **Map** page. Map overlays can be loaded in as MBTile files.



Side Panel

The **Side Panel** can be opened from any page using the ☰ icon or by swiping from the left edge of the page.

It allows navigation between the following pages:

Compass / Clino

Take a bearing or record structural planes and lineations with a range of attributes, and create new localities.

Notes and Images

Keeps a chronological record of data captured and allows geo-referenced notes and photos to be taken, which can be edited and deleted.

Map

Displays structural data on offline and online maps, and if the Pro features are installed, the user can draw lines on the maps.

Stereonet

Available only if the Pro features have been installed, the stereonet displays data as poles and planes on an equal area or equal angle stereonet plot.

Project

Details of the active project.


Switch Projects

The **Project List** page displays all the projects stored on the phone, allows creation of new projects, and gives access to additional settings and access to import.

Export

Data can be exported as a CSV, mve and if the Pro features are installed, data can be exported as Google Earth files (.kmz).

Side Panel

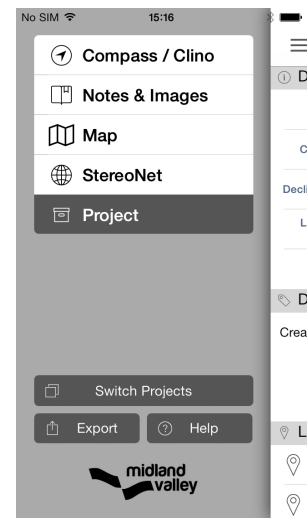

The **Side Panel**



② **Help**

Access to **Quick Help** or **Extended Help** (this guide).



Compass / Clino

Navigate to the  **Compass / Clino** page from the  **Side Panel**.

A hand bearing compass or clinometer face will be activated. The active face can be alternated between the **Compass** and the **Clinometer** by tapping on the small face.

Note: Always give the compass and clinometer a few seconds to stabilise before tapping the clinometer to lock the reading. This will help to ensure the data is consistent.

Compass

To take a bearing with the compass, rotate the phone in the desired heading and tap on the compass face. When the phone is rotated, a red bar shows the deviation from the set bearing to the current orientation. Tap the compass face again to stop tracking the bearing.

The red arrow on the compass face displays true north and the red outline arrow displays magnetic north. Declination can be user defined or calculated by the device on the project **Settings** page.


Note: The compass works best when the phone is held level. See our guide on **Digital Compass Calibration**.

Clinometer


The display on the clinometer shows a dip symbol if planes are being recorded or an arrow symbol if lineations are being recorded.

To lock the reading, tap the clinometer face. The icon will change from **red (active)** to **black (locked)**. The reading can be manually overwritten by tapping on the dip and azimuth, or dip and strike numbers for a plane; or plunge and plunge azimuth numbers for a lineation.


Compass / Clino

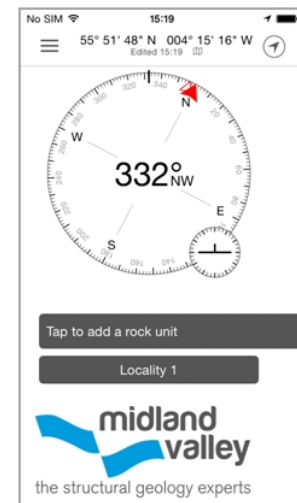

Compass face. Tap to set a bearing.

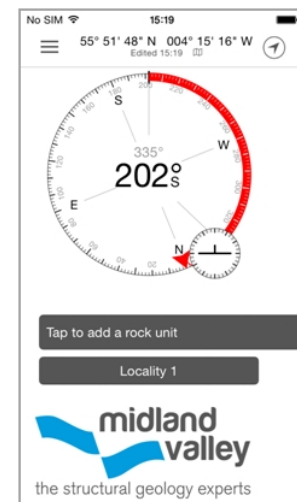

Compass face. The set bearing is shown by the red bar.

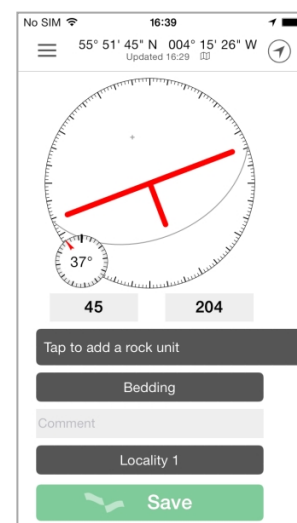

Clinometer face



To measure the orientation of a **planar feature** the **back** of the phone should be placed flat on the **plane** to be recorded.

To take a **lineation reading** the long **edge** of the phone should be placed **parallel** to the **lineation**, ideally with the back of the phone on the **plane**.

Note: The dip icon orientation corresponds to the phones orientation, not north.

Location

Location is displayed as a latitude and longitude at the top of the page **1** . Below this, the time of the last location update is displayed. The text gives an indication of how the location was set; **Updated** indicates that the location was received from the GPS, whilst **Edited** indicates it was manually set.

Note: UTM co-ordinates are only displayed in the exported data tables.

2 **1** Active or Idle GPS

When taking a reading from the **Compass / Clino** or **Map** page an arrow is displayed in the top right corner of the iPhone (below the battery icon). There are two modes, **active** and **idle** which can be toggled by tapping on the arrow.


1 Active

The **white arrow with black background** indicates that the phone's GPS is in use, and the current location is being updated. The time stamp in the top bar shows the last time a new position was found.


1 Idle

The **black arrow with a white background** indicates that the phone's GPS is idle. Any new data point or note will be assigned to the last location update the app received, either from the GPS or set by the user.

Location

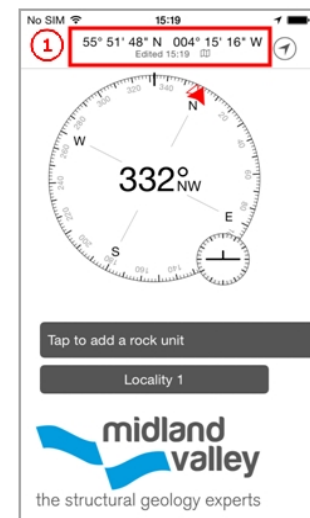

Tap the coordinates **1** to open the **Location** page. Long press on the map to set the location manually. the GPS will be set to **idle**

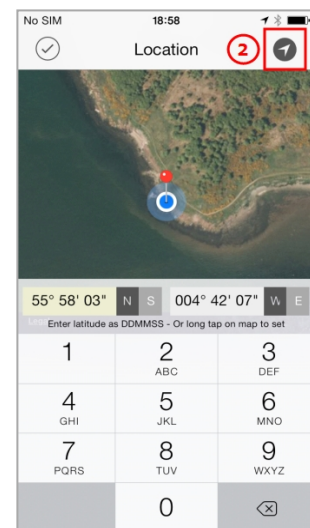

Active GPS **2** last updated GPS position is shown by blue dot and the current location by the red pin.



Automatic positioning using the GPS and updates

Clino uses the iPhone's inbuilt GPS unit for two tasks:

- Finding your location when taking a reading.
- Showing where you are on the map.

In the **Location** page, the last GPS location is shown as a glowing blue dot. The red pin represents a manually set location.

Note: The GPS is constantly trying to update when the circle behind the arrow is black (**active**). This is battery intensive and the **idle** (white background) mode can be used to preserve battery when GPS is not required.

Setting location manually

Locations can be set manually without using the GPS functionality, in degrees / minutes / seconds, from the **Compass / Clino** page. On the **Compass / Clino** page tap on the latitude / longitude (lat / long) value in the **Top Bar** this will open the lat / long **Edit Location** page. The current data location is shown by the red pin.


The GPS or current location can be manually overwritten by using a long press on the map to set a new position. This will automatically set the GPS to **idle**. Alternatively, lat / long values can be entered in degrees / minutes / seconds using the number key pad.

If you tap the GPS arrow the GPS will turn on **active** and the red arrow jumps to the received location on the map, shown as a blue dot.

Declination convention

Measurements in and exported by the app are given relative to True North. All data is automatically adjusted to True North. True North is calculated using the declination value set in the **Project Details** page.

Location

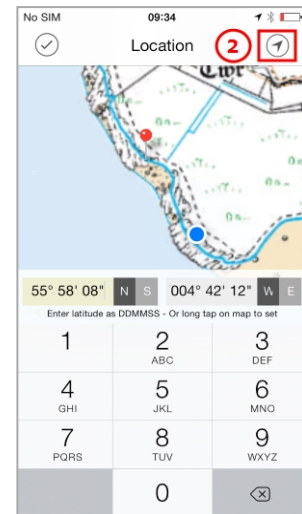

Idle GPS (2) last updated GPS position is shown by blue dot and the current location by the red pin.



Stratigraphy

All clinometer readings must be assigned to a unit in the Stratigraphy Column i.e. rock type or object colour, such as a fault or joint. When using the app for the first time, the **Stratigraphy Column** is blank.

① Tap to add rock unit or on the plus ⊕ (on pre-existing columns) to open the **Stratigraphy / Rock Types** page. In the **Stratigraphy / Rock Types** page tap the plus ⊕ to add new rock units.

② To change the name of a unit, tap on the text to activate the on screen keyboard.

③ To change the colour of a unit tap on the pencil ✎ on the right hand side of the page. Select a new colour from the options and tap the tick ✓ in the top left corner to apply.


④ Units can be reordered by dragging them to the correct position in the list. To do this, long press on the three vertical dots on the left hand side of the unit. The unit row will expand to indicate it can now be dragged. Move it to the desired location and lift your finger from the screen to drop it.

⑤ Stratigraphy can be imported from pre-existing Clino projects or from Move as .csv files. Tap on import 📄 to open the **Import** page. Tap the cross ✕ to cancel an import.


Note: To change the active unit on the **Compass / Clino** page, tap on the desired unit in the **Stratigraphy Column** on the right hand side of the page.

Tap the tick ✓ when complete.


Stratigraphy

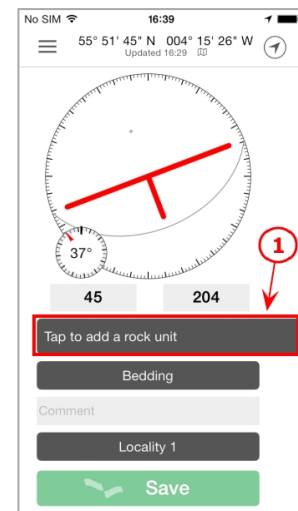

Clinometer face

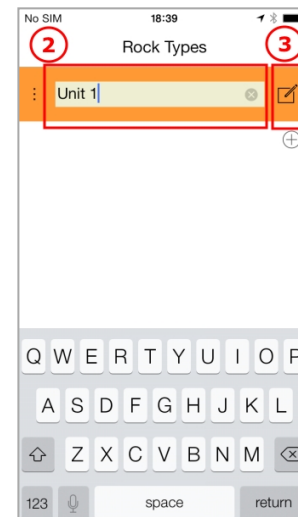

Rock Type page

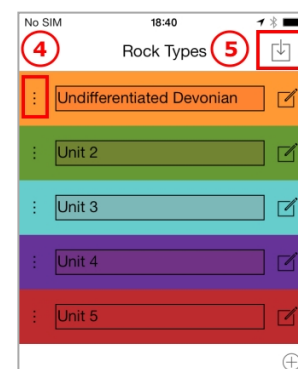

Units added to Rock Type List



Deleting a unit from the stratigraphic column

A rock unit can be deleted from the **Stratigraphy / Rock Type** page by swiping from right to left on the right hand side of the unit. Tap to delete.

Locality

To change which locality new data will be created in, tap the locating button and select the desired locality from the list. Tap the plus icon to create a new locality.

Refer to the **Project** section to find out more about the automatic naming of localities, and Editing Data for more information on editing locality details.

Data type

1 Tap this option to choose between a range of planar and linear data types. Open the Select Data Type page by tapping on the current plane or lineation type. Tap any symbol to assign it to the current data or tap above to dismiss.


If the Pro features are installed, this list can be customised:

To open the list of currently collectable planar and linear data types, tap on the Settings icon.


2 Selecting an existing data type allows the icon and name to be edited or the symbol deleted. Any data assigned to a symbol that is deleted will be set to the default symbol of its type. For this reason, the default bedding and lineation symbols cannot be deleted.

3 New icons (icon and name) can be added to the current list by tapping on the plus icon at the top right hand corner of the **Edit Symbol** page. Tap the tick to apply or the cross to cancel.


Data Type

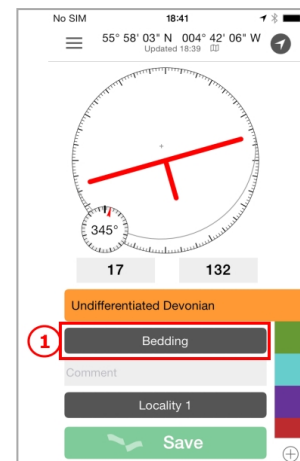

Clinometer face

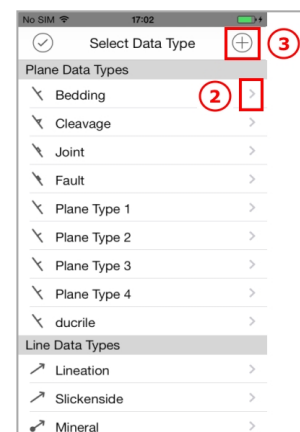

Data Type page

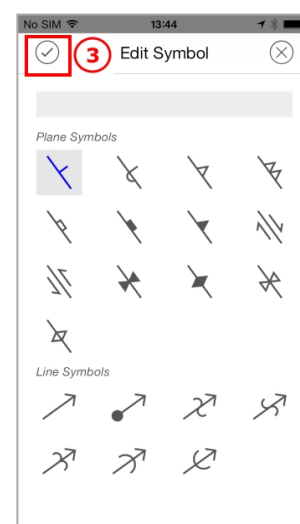

Edit Symbol page



Comments

Add a comment which will be saved with the reading.

When adding a comment for the next data point on the Clino page, you have the option to take a picture using the phone's camera. In this case, when the data is saved, TWO entries will be created: one data point entry and one note entry with the images. Both entries will share the same location and comment.

Save

Tap **Save** to store the reading which is displayed in the note book and on the map. Make sure the confirmation pop-up **Saved!** is displayed or the reading will not have been stored.

The **Save** button will be disabled if the clinometer is active or if the stratigraphy table is empty.

Note: **All my projects are in the same position, even though I entered different localities in different regions.** ALWAYS check that your GPS is on and has been updated recently. Any measurements will be recorded to your last know position. Therefore if the GPS has accidentally been turned off, or has lost signal the most recent measurement will be positioned at the last GPS reading. These can only be edited manually in Move, and only by using human knowledge not satellite accuracy.



Notes & Images

Navigate to the **Notes & Images** page from the **Side Panel**. The **Notes & Images** page provides a chronological record of all the data in your project, much like a field notebook.

Data list

Data is captured from the **Compass / Clino**, Map and **Stereonet** pages, and is recorded here under the associated locality in reverse chronological order. Localities are listed in chronological order. However, the active locality will always be at the top of the list.

A summary of each piece of data is shown in this list. Tapping on each item allows the details to be viewed and editing of the fields detailed below. Notes and images can be added to the data list from this page.

Editing structural data


Clino does not allow the user to modify existing structural readings; however the rock unit, data type, comment and location can be edited. The rock unit and comments can be edited in the same way as on the **Compass / Clino** page.

When editing the data type, the data cannot be converted from a line type to a plane type or vice versa. Data can only be changed to a different symbol of the same data type. Structural data can be moved by selecting the **Move Data** option. See the **Setting location manually** section for more details on setting locations.


Editing notes and images

Clino allows the user to update the text and location in **Notes & Images**. The text can be edited by tapping on it. The location can be changed by selecting the **Move Data** option. See the **Setting location manually** section for more details on setting locations. Images can be viewed full screen


Notes & Images

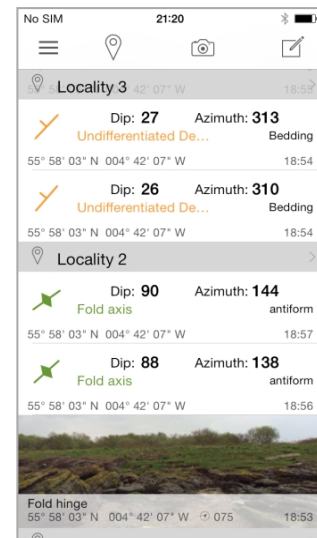

Notes & Image page

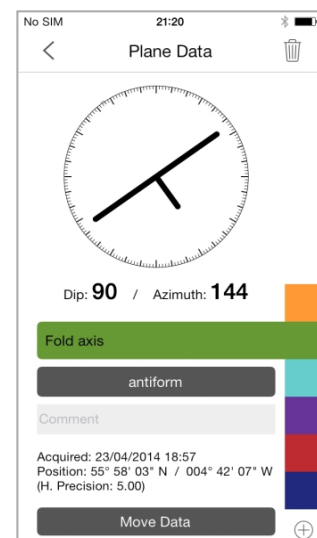

Example of **Edit** page

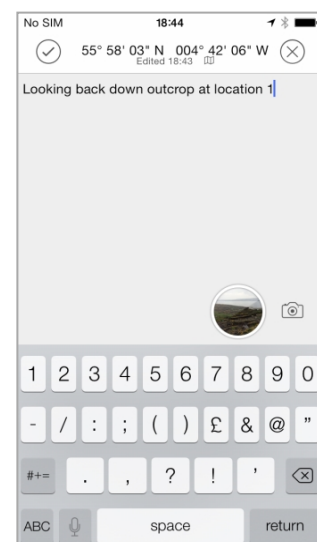

Note page



by tapping the image preview. To return from the full screen view, tap the image once to bring up the tick (✓) icon. Tap tick (✓) to close the full screen view.

Note: it is not possible to edit an image, or add a new one, after the note has been created.

Editing localities


When editing a locality, the user can change the name, description, colour and location. The colour of localities defaults to grey, and has no association to rock units. The colour can be selected by tapping the colour square (1) next to the locality name.

The location of a locality can be changed by long pressing at the new location on the map, or by entering the latitude and longitude manually. Refer to the **Setting location manually** section for more information.


Deleting note book entries

In the **Notes & Images** page, orientation data, notes, photographs, line or polygon objects can be deleted by swiping from right to left on the right hand side of the unit. This will display a bin (🗑️). Tap this to delete the chosen object. When editing note book entries, tapping the bin will also delete the entry.

Filters allow the **Notes & Images** page to be filtered to display **All** data, or just **Notes**, **Datum** or **Lines**. They can be accessed by scrolling to the top of the list (by tapping in the status bar). The active filter will be dark grey. Tap on the filter to apply it to the list.

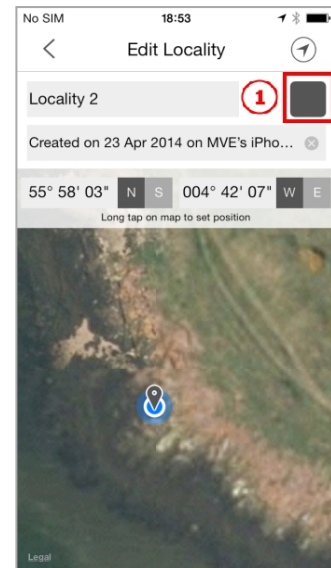

Edit Locality page

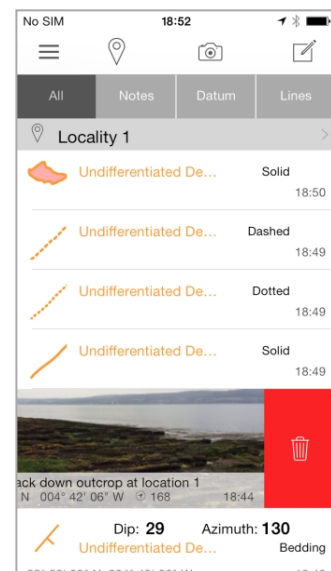

Example of Delete



Screen Options

☰ **Side Panel**

Please refer to **Side Panel** section of this document.

📍 **Localities**

This displays a list of localities that have been created, and allows the user to create a new one. The currently selected locality is displayed with a tick.

📷 **Camera**

This option will open up the camera, allowing the user to take a geo-referenced photo which automatically records the bearing the camera is facing. Take the photograph by tapping the white circle at the bottom of the display. An option to **Retake** or **Use Photo** will become active. Tap Use Photo to keep the image. A page displaying the current location and an option to type a note or description of the photograph will become active. Tap the tick icon ✓ when complete. Tap the cross icon ✕ to cancel saving the photo.

📝 **Note**

Creating notes allows the user to write longer descriptions which would normally feature in a field notebook. An image can be attached to the note by tapping the camera icon 📷 . The image can be selected from the camera roll, or a new photo can be taken. Tap the tick icon ✓ when complete. Tap the cross icon ✕ to cancel saving the note.



Map

Navigate to the **Map** page from the **Side Panel**. The **Map** can display the location of all the data that has been collected, as well as **Base Maps** that have been imported into the project.

Navigate around the map by dragging it with a finger. To zoom in, use two fingers pinched together, move them apart to zoom out.

Icons on the map can be selected to display more details, and tapping the ⓘ opens the **Edit Data** page.

Screen Options

☰ Side Panel

Refer to **Project Set up** and **Settings** section.

📍 Locality

Toggle the localities which are displayed on the map from the drop-down **Locality** menu.


🗨 Base Maps

Choose which map is used as the base map from the drop-down menu. Refer to **Importing Map** section for more information.

✍ Drawing

The Pro features allow lines and polygons to be drawn on the map. Tapping the **Drawing** ✍ option activates drawing mode. In drawing mode, lines and polygons can be drawn using a finger. To pan around the map in drawing mode, use 2 fingers pinched together. Drawing mode displays four additional options at the bottom of the map:


Map

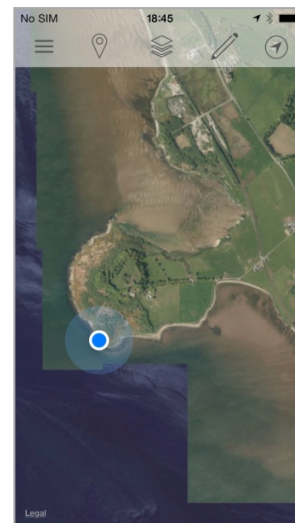

Map page with satellite overlay displayed. Blue dot shows current GPS position.



Drawing Options

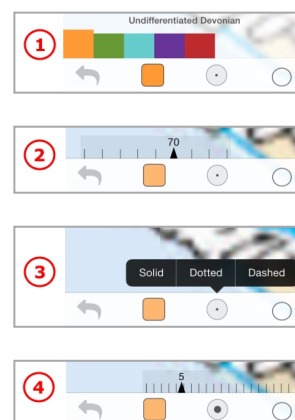

↶ Undo

This option allows the user to undo the most recent drawing action. Note that there is no redo option.

■ Unit colour ① and transparency

Tap to select the colour of the line. Each line is associated with a rock unit, so only the colours used in the rock unit list are available. Tap to activate the **Rock Type**.

Long press and slide up to activate transparency. Sliding a finger horizontally over the button will adjust the transparency.

○ to ● Line style ③ and width ④

Tap to choose the style of the line. Lines can be solid, dotted or dashed.

Long press and slide up to activate width. Slide a finger horizontally over the button to adjust the line width.

○ or ● Line ⑤ or ⑥ polygon drawing

Tap to toggle between line (white) and polygon (black) drawing.

Lines can be **extended** or **joined** together. To extend an existing line, tap to select it (it will be highlighted in yellow). Start drawing from the end of the existing line to **extend** it. **Join two lines** by drawing from one end of first line to one end of the second line. Only one of the existing lines needs to be selected.

Note: Joining and extending lines is only possible when a line is selected and if they belong to the currently selected **Rock Unit**. **Lines** cannot be closed to create polygons.

Polygons cannot be edited in the current version.

Drawing



Example of **line styles**



To extend, select line (highlighted in yellow) and continue to draw.




Example of a **polygon**



📍 Active or 📍 Idle GPS

When the black arrow is displayed, the map will centre on the current location and will keep your position centred in the map as you move around your mapping area. Tapping again, the map will spin to **show facing direction**. This means the map will be rotated to match your orientation. Tapping the compass again will switch the map back to being oriented with north at the top of the screen. When the GPS mode is active, any new data point or note will be assigned to the last updated location provided by the sensors.

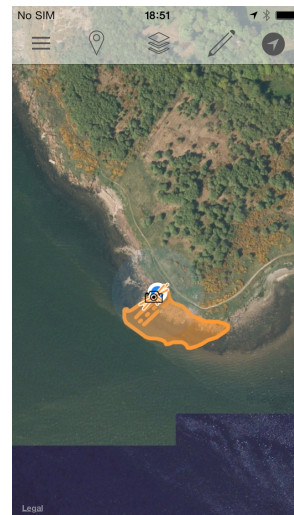


Map page with **Active GPS**





Map page showing facing direction

Changing Maps

Maps will show either the satellite or the road map of the current area. To change the map display, touch the **Maps**  icon and select the map so that it has been ticked. This chosen map will now display in the **Map** page over the iPhone's default map.


MBTiles can also be imported (see below). The imported maps will shown in a list and can be selected when tapped. Only one overlay map can be displayed at a time. Overlay maps will be displayed over either the satellite or the road map (which ever was active last).

To view the image in a project, navigate to the **Map** page:


- ① Tap **Base Maps** 
- ② Select **Edit Base Maps**.
- ③ All the maps that are added to the Clino **Documents** folder, via iTunes, will be listed here as **New Maps**.
- ④ Tap on  to add the selected map to the current **Project Map List**.

If you tap on the currently active overlay map, the map view will zoom to fit the extents of that overlay.


Viewing Map Overlays

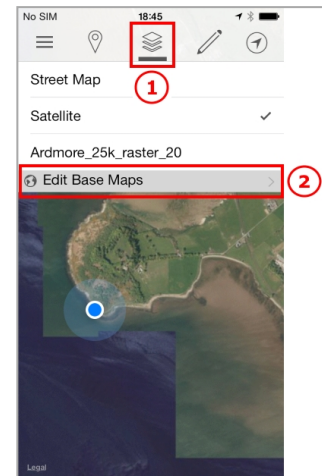

Satellite display

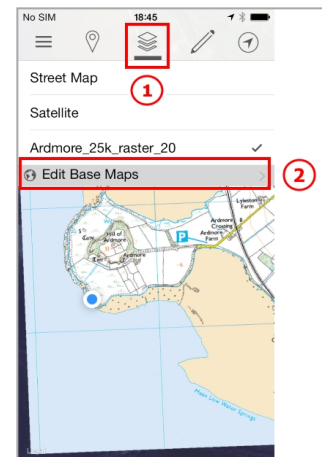

MBTile overlay

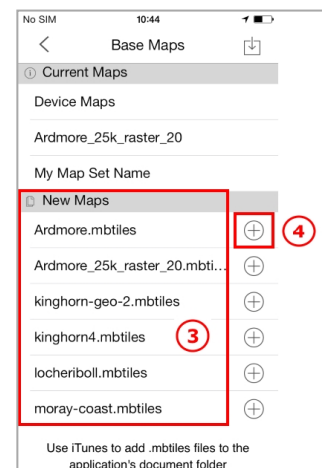

MBTile loading



Loading Maps

Maps (which may contain geological, topographic and geophysical information) can be imported into Clino as MBTiles which are created from geo-referenced images (GeoTIFF, JPEG 2000, KMZ etc.).

There are a variety of programs that can perform the conversion of geo-referenced images into MBTiles, including:

- Move2015 (www.mve.com) [Windows/Mac OS X/Linux]
- Global Mapper [Windows]
- Map Tiler (free demo available) [Windows/Mac OS X/Linux]
- Arc2Earth plugin for ArcGIS [Windows]

Note: Make sure the image you use has a high enough resolution for the scale of mapping being performed.

In low resolution files the higher you zoom in, the more distortion will be seen in the image.

Note: MBTiles files are locked at a minimum and maximum zoom level. Each zoom level increases the magnification by a factor of two, and as a result the size of the MBTiles file approximately increases by a factor of two as well. This means that low zoom level files take up less space on the phone, but not as useful for mapping as higher zoom levels. Be wary of the file size when increasing the zoom level beyond 16, as the file size grows exponentially.

Zoom Level	Metre / Pixel
1	78272
2	39136
3	19568
4	9784
5	4892
6	2446
7	1223
8	611
9	306
10	153
11	76
12	38
13	19
14	9.6
15	4.8
16	2.4
17	1.19
18	0.6
19	0.3
20	0.15

Guide to **zoom levels**



Exporting MBTiles from Move2015

To export an MBTiles file from Move first make sure you have an image present in a geo-referenced .move file. Select the image and click the right mouse button. Select the **Export As** option then **Export MBTiles**.

The **Set MBTiles Properties** dialog box will appear. Select the **Minimum Zoom Level** and **Maximum Zoom Level**. An **Estimated Output** number of tiles and the size of the file will be displayed. An MBTiles file will be exported to the chosen location.

For topographical maps, a scale of 1 m/pixel will produce a very large file with a scale that will show paths, streams etc. For satellite images, a scale that fits the resolution of the satellite is suitable. For geological maps, finer resolution than the map itself may be more suitable as this will allow high levels of zoom. It is also worth making all the small zoom levels available (typically a zoom of above 1:2,000,000). This will ensure that the image can be seen in relation to the global map, and will only take up a small amount of the phone's memory. It is worth taking some time to experiment with the scale of the map before going into the field.

Import MBTiles files into Clino

Once images are saved in the MBTiles format, they can be added to the Clino **Documents** folder via iTunes.

In iTunes, to add the files to the documents folder, select the **Add...** button at the bottom of the right-hand column, and navigate to where the maps are stored. This process will need to be repeated if maps are stored in different locations on your PC.



Stereonet

Stereonet functionality is only available if the user has purchased the Pro features for the app.

The **Stereonet** page allows the user to view structural data on an equal area or equal angle stereonet. The user can use filters to display a subset of the collected data.

Mean Dip / Azimuth

This option displays the **mean resultant plane** of all the planar data visible on the stereonet. The switch toggles whether the plane and pole are visible on the stereonet. The mean resultant plane is displayed as the thicker black pole and great circle.

1 Display settings

There are three display settings to choose from **Poles**, **Plane**, or **Both**. Tap one to activate it. The active display setting is shown as dark grey.

2 Stereonet plot

There are two settings to choose from **Equal Area** (Schmidt Net) and **Equal Angle** (Wulff Net).

3 Filter


Choose the data to be displayed. Individual data points can also be toggled on or off. A tick within a black circle indicates the data is being displayed.

Data can be filtered by locality, unit or type by selecting the relevant data type. **Localities** allow the user to toggle visible localities; **Units** allows the user to filter data by specific rock units; and, **Types** allows the user to filter data by planar or linear data types.


≡ Side Panel

Refer to **Side Panel** section of this document.


Stereonet

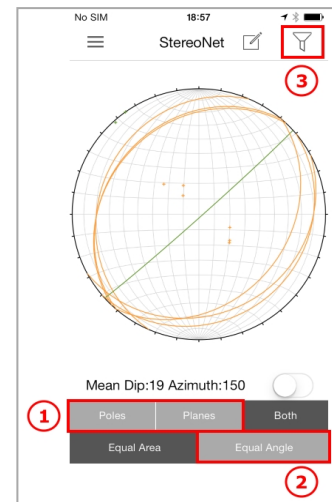

Stereonet page

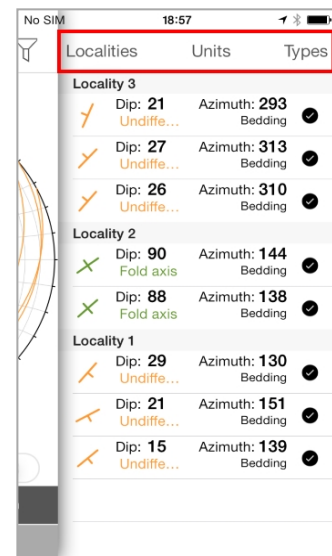

Data Display page

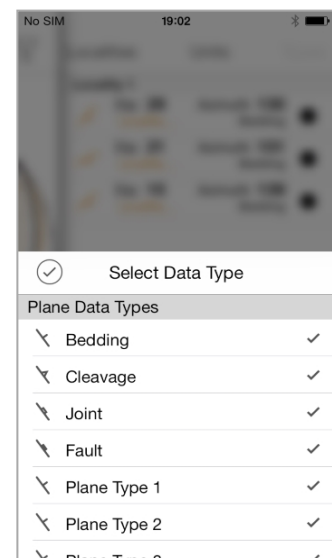

Data Type Filter menu



 **Notes**

Save an image of the stereonet to the **Notes & Images** page.



Project

Locality Prefix

By default this is **Locality #**. Changing the locality prefix changes the default names given to localities when they are created. The hash (#) indicates the position of the number in the name. If it is excluded the locality number will just be appended to the prefix given.

Folder

Where to find the folder your project is stored in when you connect your device to a computer.

Description

Add a description of the project. By default it will give the creation date and the name of the device it was created on.

Localities

A list of the localities defined in the project, with creation date and time. Localities can be deleted by swiping to the left on the locality.


Merging Projects

In the project details page, you have the ability to import another existing project. After tapping the import button, you will be presented with the list of other projects on the device. Selecting one project will show more details. You can then import the selected project.


You have the option to ignore base maps (MBTiles) and/or images. Keep in mind that importing these will create copies of all the data and require extra storage space.

When importing, the rock unit and symbol tables will be merged. If the imported rock unit list or symbol list contain entries that have the same name as those in the current project, the imported data will be assigned to the existing unit or symbol.

Project Details

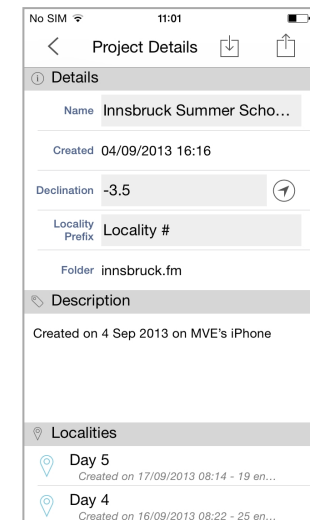

Project page opened from the **Side Menu**

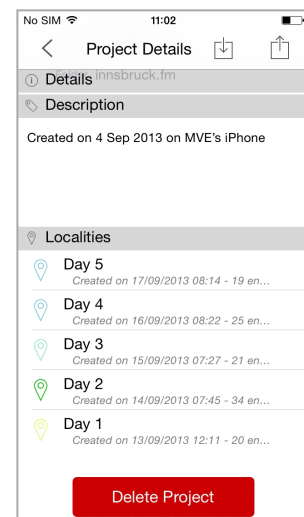

Project page opened from the **Switch Projects** page



Deleting a locality

Locations can be deleted from the edit location page accessed from the notebook, as well as swiping from right to left on a locality in the **Project Details** page. Note that the active locality cannot be deleted. Change the active locality from the **Compass / Clino** or **Notes & Images** pages.

Delete a Project

This will permanently remove the project from the device. See **Switch Project** section for more details.

Note: This option is only available when opened from the **Switch Projects** page.



Switch Project

The **Projects List** page lists all the current projects stored in the phone.

There are four button options at the bottom of this page:

App Setting

Turn the **GPS on and off**, define the units and set the **Angle Convention**. **Line Picking** accuracy can be altered if the Pro features are installed. The **Version** and **Acknowledgements** are also available from this page. See the **Settings** section (below) for more information.

E-mail feedback

We are still developing this app and are always keen to improve our products so please let us know what you think and if you have any wishes for future development.

Import


Projects can be re-imported to the iPhone after they have been copied onto a computer. This includes projects created on the Android version of Clino.

To import a project from a computer to the iPhone, follow the steps below.


First find the .fm folder saved onto your computer and use Zip to create an archive, as iTunes does not handle moving folders directly to an iPhone. Once zipped, bring the zip file across and extract it on the phone. Plug the iPhone in so it is linked to iTunes. Go to the app page in the iPhone folder and find Clino. Now drop the .fm.zip file into the app directory. Once this is finished copying across to the app, eject the iPhone.

Open up Clino on the iPhone and navigate to the switch projects page. Tap the import button at the bottom. A list of .fm .zip files that are present on the

Switch Project

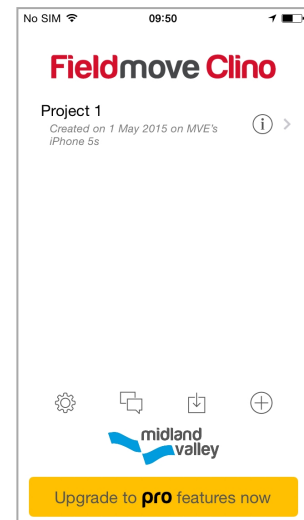

Project List page

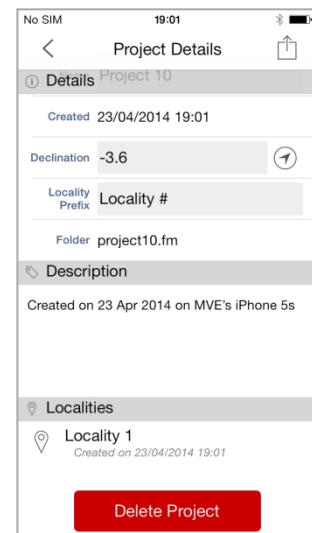

Project page opened from the **Switch Projects** page



phone will be shown. Tap on one of those files to unarchive it. The app will automatically unzip this and, if successful, add the project to the list of projects on the phone.

Please note that while the import will not overwrite an existing project, it does not ensure the project name not already in use. This may lead to several projects having the same name. In the list of .fm.zip file, swipe to delete archives that are no longer needed.

⊕ **New Project**

Create a new project, this opens the **Project Details** page.

Deleting a Project

To delete a project, navigate to the **Switch Project** page and select the information ⓘ icon for the project you wish to delete.

This will display the project details. Scroll to the bottom and select **Delete Project**. This will remove the project from the device.

Note: You cannot delete an active project. To delete the active project, you will have to switch to another project, and then return to the project details from the **Switch Project** page.



Settings

The **App Settings**  gives options for:

Location Services

Turns GPS functionality on and off. Turning off saves battery, but be wary that the location won't update when the GPS is turned off.

Unit

Metric or imperial units can be displayed when an elevation reading is available.

Angle Convention

Choose between **Dip / Azimuth** (default) or **Dip / Strike** for the right hand rule (RHR). Both conventions are used when the project is exported.

Line Picking

If the Pro features have been purchased and installed, the user can define the sensitivity that should be used to select a line in the **Map** page. With a larger setting it will be easier to extend lines but picking will not be as accurate.

Version


The version of the app currently installed on your iPhone. Please provide this information along with your operating system when reporting bugs.

Acknowledgements

This lists copyright notices for the third party software libraries used by Clino.

Tap the  when complete.

Settings

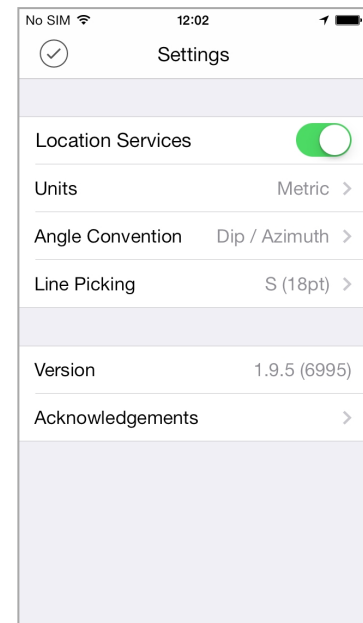

Settings page



Export

Projects can be exported by selecting the export option from the **Side Panel** or **Project Details** page. Data can be exported as:

- CSV (.csv);
- Move (.mve);
- Google Earth (.kmz) in Clino Pro.

Tap the selected file type to export the data. The operation can be cancelled by tapping **Cancel** on the progress pop-up.


Note: Exporting a project with a large number of pictures and data can take some time.

Once the export is complete, an option to **Share** data is available on pop-up box. Data can be shared by:


- **AirDrop** – Share data wirelessly with another Apple device.
- **Mail** – Email the exported project as an attachment. Be aware that large projects may be too big to attach to an e-mail.
- **Dropbox** – This will let you upload the exported file straight to Dropbox. This requires network connectivity. The first time, you will be asked to grant permission so that Clino can access your Dropbox. This will be done from the Dropbox app if it's installed, or otherwise via a web interface. You can then browse to your Dropbox folder and tap **Choose** when you are ready to upload the file. Please note .kmz and .mve files can be quite large if they contain images.
- **Open In** – Open exported data in another installed app. For example, the Google Earth (.kmz) export can be directly opened in the **Google Earth** app if installed.

Exported CSV files will be stored in their project folder, whilst Google Earth or Move exports will be located in the documents folder. To access this


Exporting Data

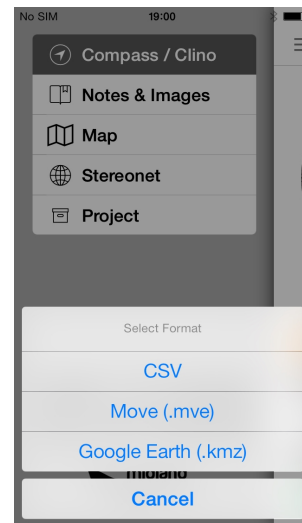

Export menu

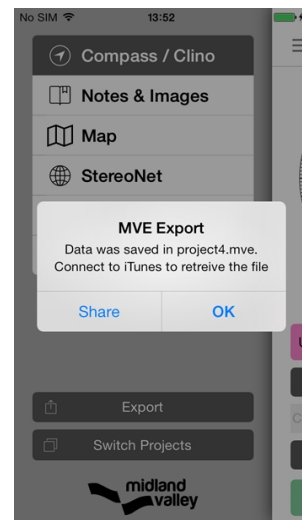

Share pop-up option

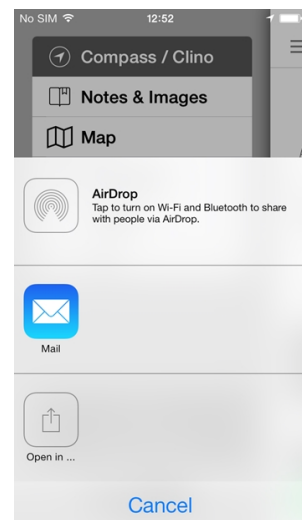

Share menu



data connect the phone to iTunes on a laptop or desktop PC. Select the device from the iTunes toolbar and choose Apps from the device option panel. The device may need to be synced to see these options. Scroll down to the list of apps and select Clino. A list of associated documents will appear on the right-hand column. Select the files to copy from the iPhone and click **Save to**.

Opening exported projects

CSV files are comma delimited and store geo-referenced point data and photo locations. The first line of each file gives the column titles. Each .csv file contains a single data type, and is named as such. For example, all localities are saved localities.csv and plane data is stored in planes.csv. Whilst localities and their data are stored in separate files, they can be easily cross referenced using the **localityId** which is assigned to each locality and data point. CSV files can be imported directly into many GIS software packages as CSV/ASCII data. Files can be viewed quickly by opening them in simple text editors such as Notepad, or spreadsheet software such as Excel. Note that images are not exported in the CSV export. Instead the geographic location of each photo is found in the image CSV file, along with the name of the image file. All images can be found in the **images** folder, which is stored in the project folder on the iPhone.

Note: CSV files do not contain lines or polygon information.

Move files (.mve) can be opened directly in Move. Move is designed for 2D and 3D model building, interpretation and validation in 4D. You can also load .mve files for digital mapping on a tablet PC, or into Midland Valleys free 3D visualization software - MoveViewer.

Note: When importing the data into Move it is advisable to set up the projection in a new document and insert the .mve file into this new



document. Doing so avoids UTM calculation issues and misplaced data for larger spanning projects. This process will also flag up any UTM calculation issues on the import summary and is a good check of data location / projection validity.

KMZ files can be opened in Google Earth and Move when unzipped.

Note: KMZ files do not preserve line style.

Note: When I open my exported .kmz project into Google Earth I can only see some of my data. In the top left of the Google Earth screen a time stamp bar shows the range of information displayed that is set between specific dates. The user may need to alter this so that the extent range covers the time period that the data was taken.



Digital Compass Calibration

Most new smartphones contain electronic magnetometer, gyroscope, and accelerometer chips that, either individually or when combined, provide orientation information about the device. These electronic components vary in quality and are subject to a number of limitations. For example, magnetometers can be strongly influenced by the magnetized iron, steel or other permanent magnets in the device (the hard iron effect), as well as being influenced by external magnetic material in the natural and built environment.

Gyroscopes often suffer from gyro-drift – an error caused by the accumulation of the unique bias present in each gyroscope. We can counteract these limitations by attempting to calibrate the sensors, or using a combination of their output data to provide an improved result.

However, some smartphones perform more consistently than others. This variation between devices can be caused by:

- differences in phone hardware and firmware.
- differences in the built-in noise filtering and sampling frequency
- the different sensor combinations (sensor fusion) or compensation algorithms


There are also differences between the mobile operating systems and how they allow developers to access and manipulate the sensors available on each device.

We are reluctant to recommend specific devices to run Clino, however there are significant variations in the quality of the components that are currently being used by the various manufacturers, and we feel strongly that we should make users aware of some of our recent findings.

Calibration for iPhones

The iPhone 4S, 5, 5C and 6 contain good quality components and the compass readings are generally accurate to ± 1 degree – better than can be achieved with a traditional hand-held Brunton or Silva compass.

Unfortunately the magnetometer / gyroscope / accelerometer combination in the iPhone 5s is of lower quality and the compass is only accurate to ± 5 degrees. This is a known issue which has been widely documented online and in the press. Apple have produced a firmware fix for this issue but we have not yet had the opportunity to test the device with the installed update.

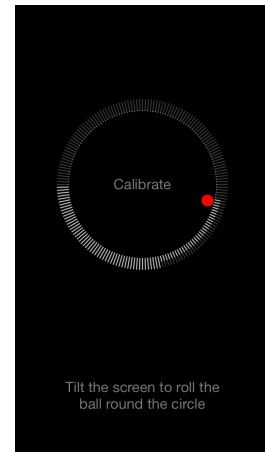

To calibrate, Apple phones display a black screen with a small red ball that must be rotated within the confines of a graduated circle. The compass clinometer within Clino will not become active until this operation has been performed.

We have found that some devices do not correctly report inclination. This is obvious when a device is on a flat horizontal surface, yet Clino still reports a dip. We believe this is due to components in the device not being seated properly, as we have tested other devices of the same make and model and not observed any problems. To counteract this, we have added an accelerometer calibration option in the app settings. In all cases, calibration resulted in devices correctly reporting inclination.

To get the most out of your smartphone we recommend that you collect data with the device in a variety of orientations and compare this against a traditional hand-held compass clinometer to work out the best orientation to collect data in. Many Android devices work better when held against the rock in landscape mode (long-axis horizontal) rather than in portrait mode (long-axis vertical). When measuring lineations, some Android phones will only record sensible measurements of plunge azimuth in one orientation - when the device is held with the top of the screen pointing down- or up-plunge depending on the manufacturer. This does not seem to apply to the iPhone (all models) with good data being recorded irrespective of the orientation of the phone.

These questions may help you

- Does the phone have reasonable consistency with itself in all orientations and situations?
- Does the phone have reasonable consistency with a control analogue compass-clinometer in all orientations and situations?
- Are there any orientations (e.g. device long-axis vertical or horizontal) that provide more consistent and accurate results? If so, make sure to collect data only in these orientations.

As with an analogue compass, be aware of sources of interference. This can come from magnets, ferrous metals, electronic devices, another analogue compass or electronic device, watch or phone case (beware of magnetic clasps) to name a few.

..and finally

Clino is designed to make data collection quick and easy, facilitating the collection of large, statistically valid data sets. We have found that there are tremendous advantages to using Clino on a well-calibrated smartphone.



Most users will have experience with traditional analogue devices, where often a single reading at each station is taken with the assumption that each of these readings will have a high level of both precision and accuracy. This assumption is normally wrong. We always recommend taking several readings at each location, which can then be treated statistically to provide both improved accuracy and an understanding of measurement error.

Note: All my projects are in the same position, even though I entered different localities in different regions. ALWAYS check that your GPS is on and has been updated recently. Any measurements will be recorded to your last known position. Therefore if the GPS has accidentally been turned off, or has lost signal the most recent measurement will be positioned at the last GPS reading. These can only be edited manually in Move, and only by using human knowledge not satellite accuracy.



Frequently Asked Questions

How do I load a base map?

Along with the online maps already installed on the app, users can import their own basemaps. As long as the basemap is geo-referenced it can be brought into Clino. However, we recommend importing as an **MBTile** via **iTunes** as the user can set the **zoom level** making faster to use in the field. Converting to MBTile can be done in a couple of steps in **Move**, please see the **Map** section of the respective guides for more information on how to do this.

Base maps are added to a project from the **Edit Base Maps** option in the **Map** page. The active base map can be selected from the basemap list and is indicated with a tick.

Refer to the **Maps** section for more detailed information.

How do I change the project name?

The project name can be changed on the **Project Details** page, which is accessed from the **Project** option in the **Side Panel**, or by tapping the information ⓘ icon in the **Switch Project** page.

Refer to the **Project** or **Switch Project** sections for more detailed information.

How do I set a bearing?

Navigate to the **Compass / Clino** page. If required activate the compass by **tapping on the small compass**. Tap the compass face to set the bearing, deviations from this set bearing will be displayed by a red bar. To stop tracking the bearing, tap the compass face again.

Refer to the **Compass / Clino** section for more detailed information.

What does a phone need to be able to take Clino measurements?

There are 3 important items that each phone must contain to be able to take accurate readings. They are an **accelerometer**, **gyroscope** and **magnetometer** (sometimes called a geomagnetic sensor). When looking to purchase a phone, the technical specification page will normally list what sensors it is equipped with.



How do I take a reading using the Compass / Clino?

Planar or linear readings are taken from the **Compass / Clino** page. If required, activate the clinometer by tapping on the small clinometer to the right of the compass face. At least one rock unit is required before taking a reading, so select the **Tap to add a rock unit** option first or select the rock unit you wish to assign to the data you are about to collect. Set the **Data Type** to be collected from the list of planar or linear types. The clinometer page will update to reflect the **Data Type**.

To measure the orientation of a **plane**, the **back of the phone** should be placed on the surface to be measured. To take a **lineation** reading, the **edge of the phone** should be placed along the lineation, preferably with the back of the phone on the surface – but this is not essential.


To lock the reading, tap the clinometer face. The display will change from **red (active)** to **locked (black)**. Check the location reading and associated properties, unit type, locality and add an optional comment before tapping **Save**.

Refer to the **Compass / Clino** section for more detailed information.

Does FieldMove support other coordinate systems?


At present, Clino only operates using a **Lat/Long** and **WGS84 projection** system. When the project is imported in to **Move**, the coordinate system can be changed. However, we recommend that before the Clino project is imported, a blank document is set up with the correct coordinate system so that it avoids UTM calculation issues.

How do I create a geo-referenced note?

In the **Notes & Image** page select the **Note**  icon to take a geo-referenced note.

Refer to the **Notes & Images** section for more detailed information.

How do I take a geo-referenced photo?

In the **Notes & Images** page select the **Camera**  icon to take a geo-referenced photo. If you want to insert an image as a geo-referenced image, use the camera option within the **Note** page.

Refer to the **Notes & Images** section for more detailed information.



How do I view and edit recorded data?

All data can be viewed in the **Notes & Images** page, which can be opened from the **Side Panel**. If the Pro features have been purchased, data can be filtered and displayed on a stereonet. Data can also be viewed on the **Map**.

Refer to the **Notes & Images** section for more detailed information.

How do I change a locality name?

Locality names and positions can be changed on the **Edit Locality** page, which is accessed from the **Notes & Images** or **Project** pages. Tap on the locality in the list to open the **Edit Locality** page.

The name of future localities can be set by changing the **Locality Prefix** in the **Project Details** page, accessed from the **Side Panel**.

Refer to the **Notes & Images** or **Project** sections for more detailed information.

How do I delete data?

The **Project** can be deleted from the **Switch Project** page. Active projects cannot be deleted. Switch projects to delete an active project. **Rock Units** can be deleted from the **Rock Types** page. **Localities** can be deleted from the **Notes & Images** page or the **Project Details** page. **Notebook** entries can be deleted from the **Notes & Images** page.

Swiping from right to left on an item will display the **Delete**  icon.

Refer to the **Compass / Clino**, **Notes & Images** or, **Project** sections for more detailed information.

How do I export the data?

Data can be exported in CSV, Move and Google Earth file formats. The export option is accessed from the **Side Panel** and **Project Details** page.

Refer to the **Export** section for more detailed information.

How do I use Clino offline?

Clino requires online connectivity for the basic maps (satellite or street views) and for accessing Dropbox. If you disable online connectivity, the map view will still work but will only show a basic grid in places where there is no cached data. Please note that activating aeroplane mode will also turn off



the GPS. To disable online services but preserve the GPS, please navigate to the **Settings** page and disable **Cellular Data**.

Refer to the **Settings** section for more detailed information.

I have bought FieldMove Clino pro, but now I have a new phone, how do I install FieldMove Clino on my new phone without paying twice?

If using an Apple product and your phone is linked to the same iTunes account, the purchase can be restored by selecting clicking the second button (with the circular arrow) on the Clino Pro features upgrade page. Please be aware of Apple's rules relating to the number of devices that can be linked to a specific account.

If FieldMove Clino was purchased and downloaded via Google Play, the app becomes connected to the users Google Account. To reinstall the app, navigate to Google Play store, and open My Apps. Select FieldMove Clino and click Install or Enable. You have to be logged in to your Google Account to be able to access your apps.



Our Experience



Collecting data on folded Devonian sediment at Ardmore Point

The following comments are based on our experience of testing Clino with an iPhone 5 running iOS 7.

Hardware

Battery can last for a full field day (~8 hours, with the GPS on but when other apps and data streaming are turned off). This is highly dependent on the phone and we recommend experimenting with your phone to get the best out of usage time.

When your iPhone is locked, the GPS will become inactive and will not drain the battery.

There are plenty of tough cases and water proof pockets on the market that protect the phone and make it waterproof and robust, such as LifeProof, Idry, Aquapac etc.

Preparation

A common hindrance to successful digital geologic mapping is a lack of advance preparation before leaving for the field. In addition to collation of digital base maps, elevation models, and existing geologic maps, the most important aspect of preparation is practice using the software and hardware tools. As with any compass, orienteering, and basic mapping skill, advance practice ensures that the mapping device is not the focus of the user's attention, leaving the field mapper to focus on 3D spatial analysis of rock units. We find that these issues are relatively easily overcome with advance



planning and training, as well as an appreciation for the potential benefits of digital field mapping.

We recommend testing and calibrating the phone against a compass before going to the field. See our guide on **Digital Compass Calibration**.

Things to watch out for when mapping with a smartphone

1. Make sure that you **lock** your iPhone **when it is in your pocket**. This will ensure that you don't end up with 'ghost' readings while you're en route to the next outcrop.
2. Check that the **GPS location has updated** to your current location, **before saving** a reading. Look at the time stamp (underneath the lat / long values) and check that this has the lat / long values for your current location. If you are still unsure if the GPS has placed you correctly, tap the lat / long reading (this will bring up the Map page) where you can check that your current location is correct on the map.
3. Make sure that your iPhone has **enough storage space** for a day's data collection. We recommend that, at the end of each day, you copy your files from your phone to your PC and back these up. You can then delete the project from your phone and start a new project, to free up memory. To put a project back onto your iPhone, simply paste it from its saved location on your PC into the app folder through iTunes.
4. At the start of the day, **check** your phone's **calibration** before taking a reading. Make sure that you are away from buildings, cables, vehicles and jewellery and compare the readings from your iPhone with a traditional compass-clinometer.
5. Take care to check that you have made the **right lithology and structure type** choices before hitting the **Save** button. It is very easy to collect incorrectly classified data, which cannot be used later (e.g. you have recorded a cleavage measurement as bedding or vice-versa).

Note on the geology of Ardmore Point

All the screen shots and photos in this guide are taken from Ardmore Point which is approximately 30km north-west of Glasgow. The strata exposed on the shore are Devonian in age, with excellent antiformal and synformal structures, faults and fractures with exposures of the Lower and Upper Old Red Sandstone. We frequently run training courses at this location and other sites. Please get in touch if you would like to join us to learn more about digital field mapping from the experts.



Closing remarks

We find that digital mapping tools improve the 3D spatial interpretation process by facilitating more analysis and less data management than traditional techniques, especially in the “field office” during the evenings. With a digital mapping workflow, data organisation largely occurs in the field upon data collection, transcription from paper to digital format is unnecessary, and data backup can be as simple as copying digital files to external hard drives. Digital mapping allows more time in the evenings for problem solving, targeting areas of uncertainty, and formulating effective field plans.



System Requirements

Minimum iPhone model requirements

iPhone 4, running iOS 7.0 and above



Android smartphone version

An Android version of Clino is also available to download from the Google Play Store™. Please note that the Android app is for smartphones only, and will not scale up to 7" or 10" tablet devices.



Minimum Android model requirements

A smartphone running Android 4.0 (Ice Cream Sandwich) and above.

Android is a trademark of Google Inc. Apple and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.



About Midland Valley

Midland Valley is a world leader in the field of structural geology and the development of software modelling tools using structural validation, restoration and forward modelling, to provide best practice workflows and reduce structural uncertainty. Our structural modelling software, Move, is the validation technology of choice for Oil, Gas and Mining companies, in addition to being used by Geological Surveys and a variety of Geotechnical organisations worldwide.

About Move™

Move provides workflows for digital field mapping, cross-section construction, 3D model building, kinematic restoration and validation, geomechanical modelling, fracture modelling, stress analysis and sediment modelling. The software helps the user to go beyond static models, which may be little more than an artist's impression or a computer animation. By addressing time development of structure and checking evolutionary feasibility, users are three times more likely to produce the correct result.

Find out more about the Move suite by visiting our website at www.mve.com where you can contact us for more information, pricing details or for details about our software evaluation license.

